

H500 Disassembly Instruction Document

REQUIREMENTS TO PERFORM THE ASSEMBLY & DISASSEMBLY OF MIFI	
Sales pack or Spare parts of the MIFI	
Tools	Tweezers, Electric or Torque Screw driver
ESD Gloves, shoes, Aprons, Wrist band	
Clean sol or Isopropyl Alcohol [IPA]	
Hot air blower	
Soldering Iron	

MIFI Disassembly

1. Remove the battery cover



2. Remove the battery




3. Unscrew 9 screws(M1.6*5.0mm)




4. Remove the antenna bracket




5. Unscrew 6 screws(M1.6*4.0mm)

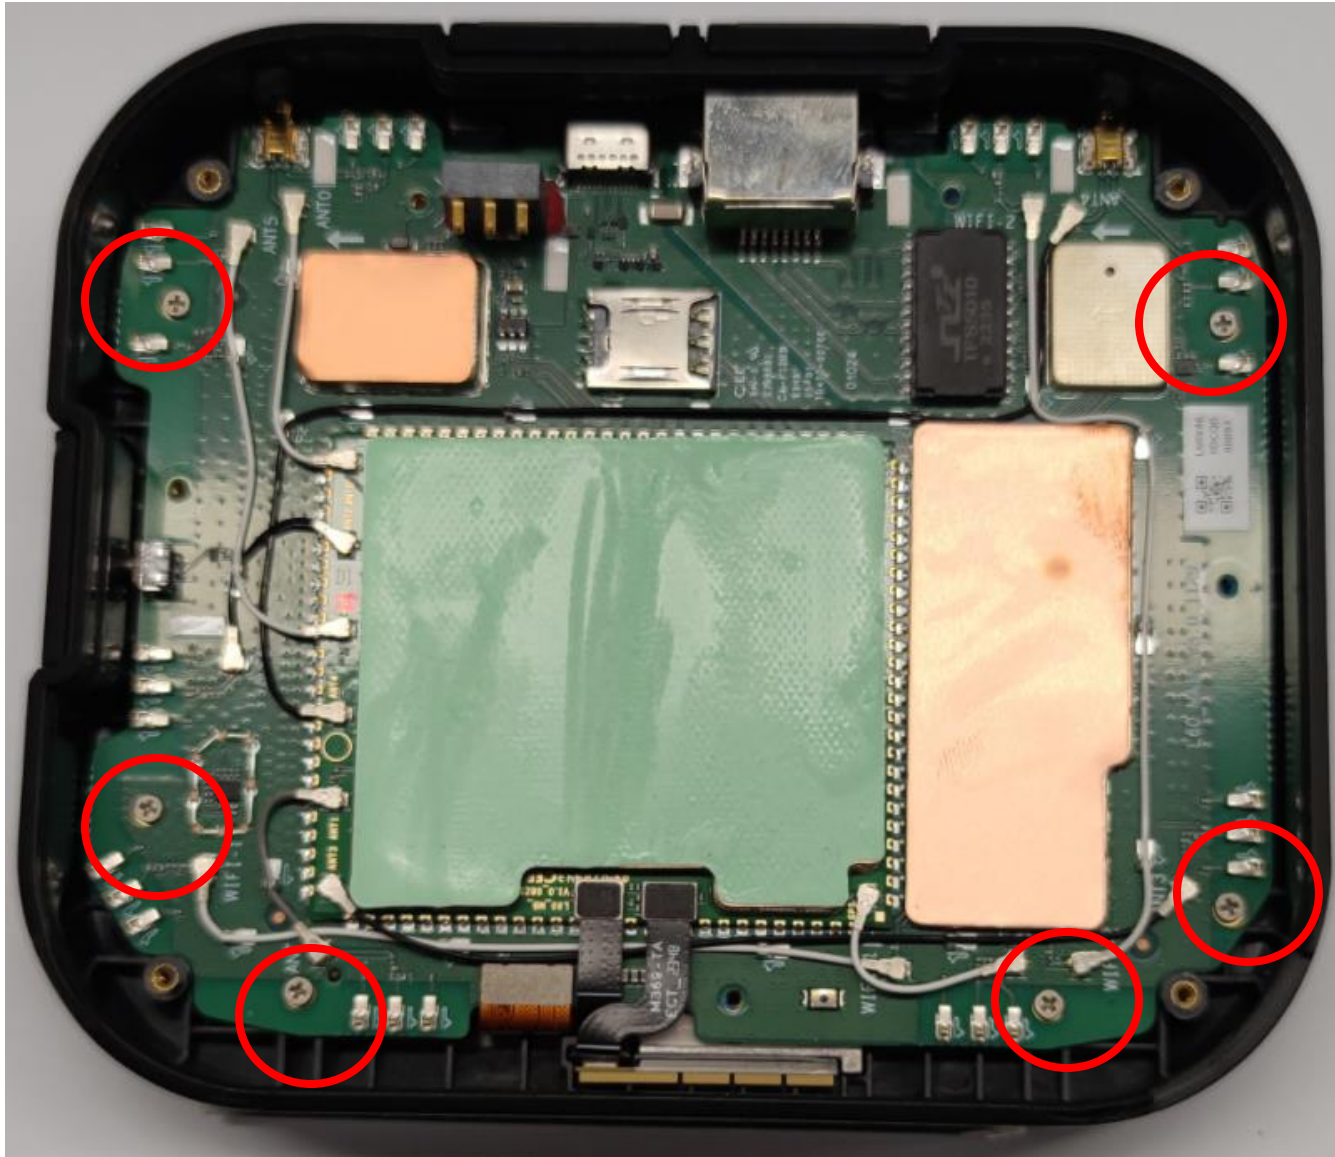


6. Unlock the connectors of FPCs (LCM& 2 MMW) and then release all the FPCs

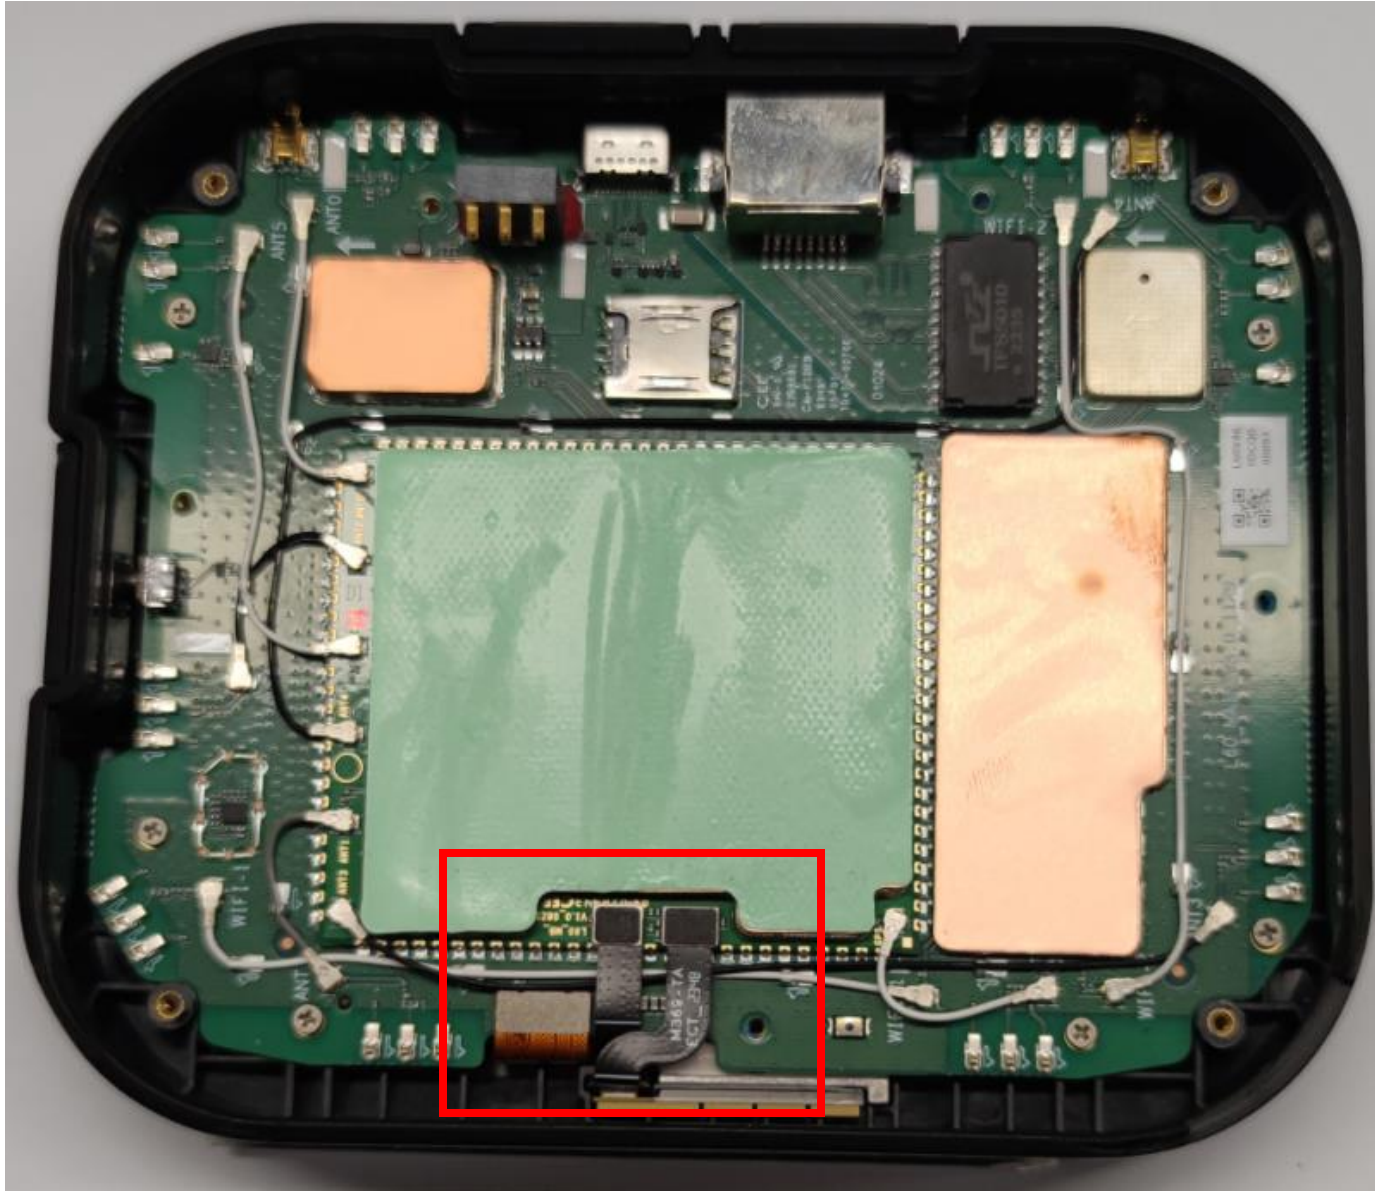

7. Remove the main PCBA

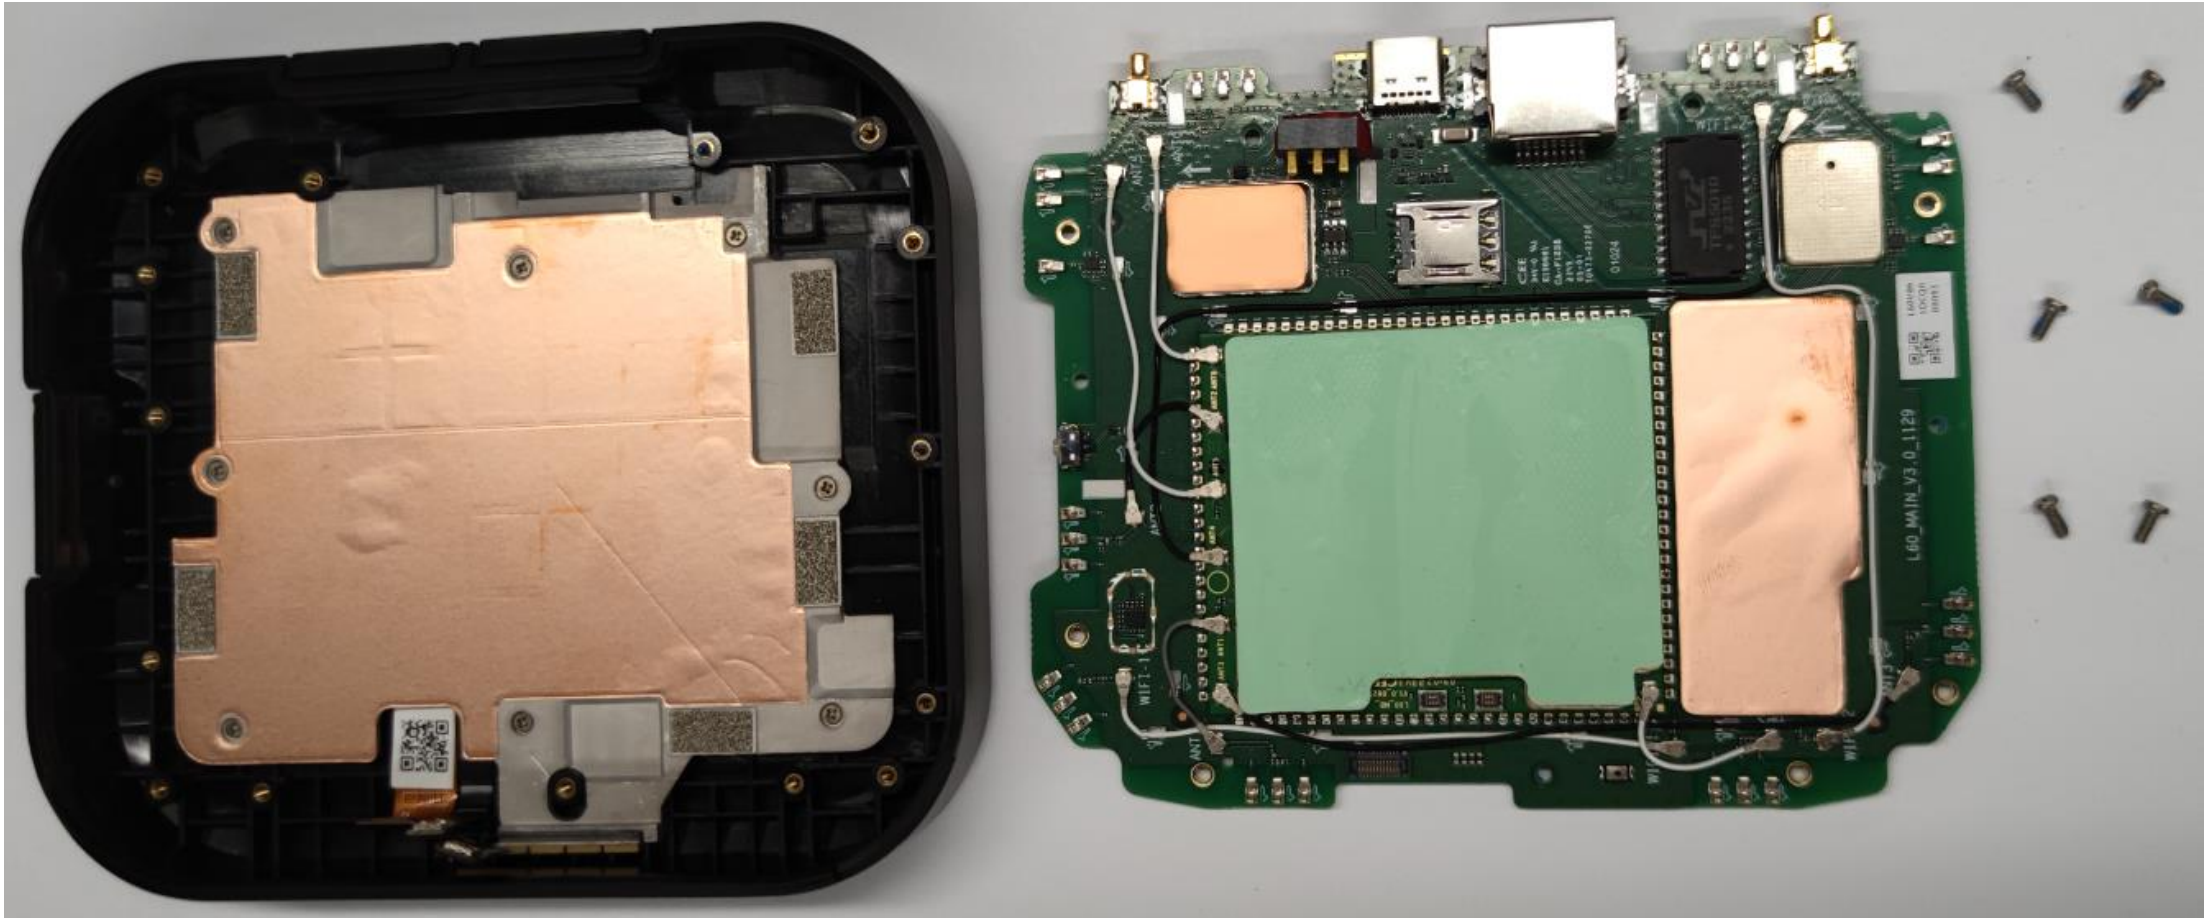

8. Unscrew 8 screws(M1.4*3.0mm)

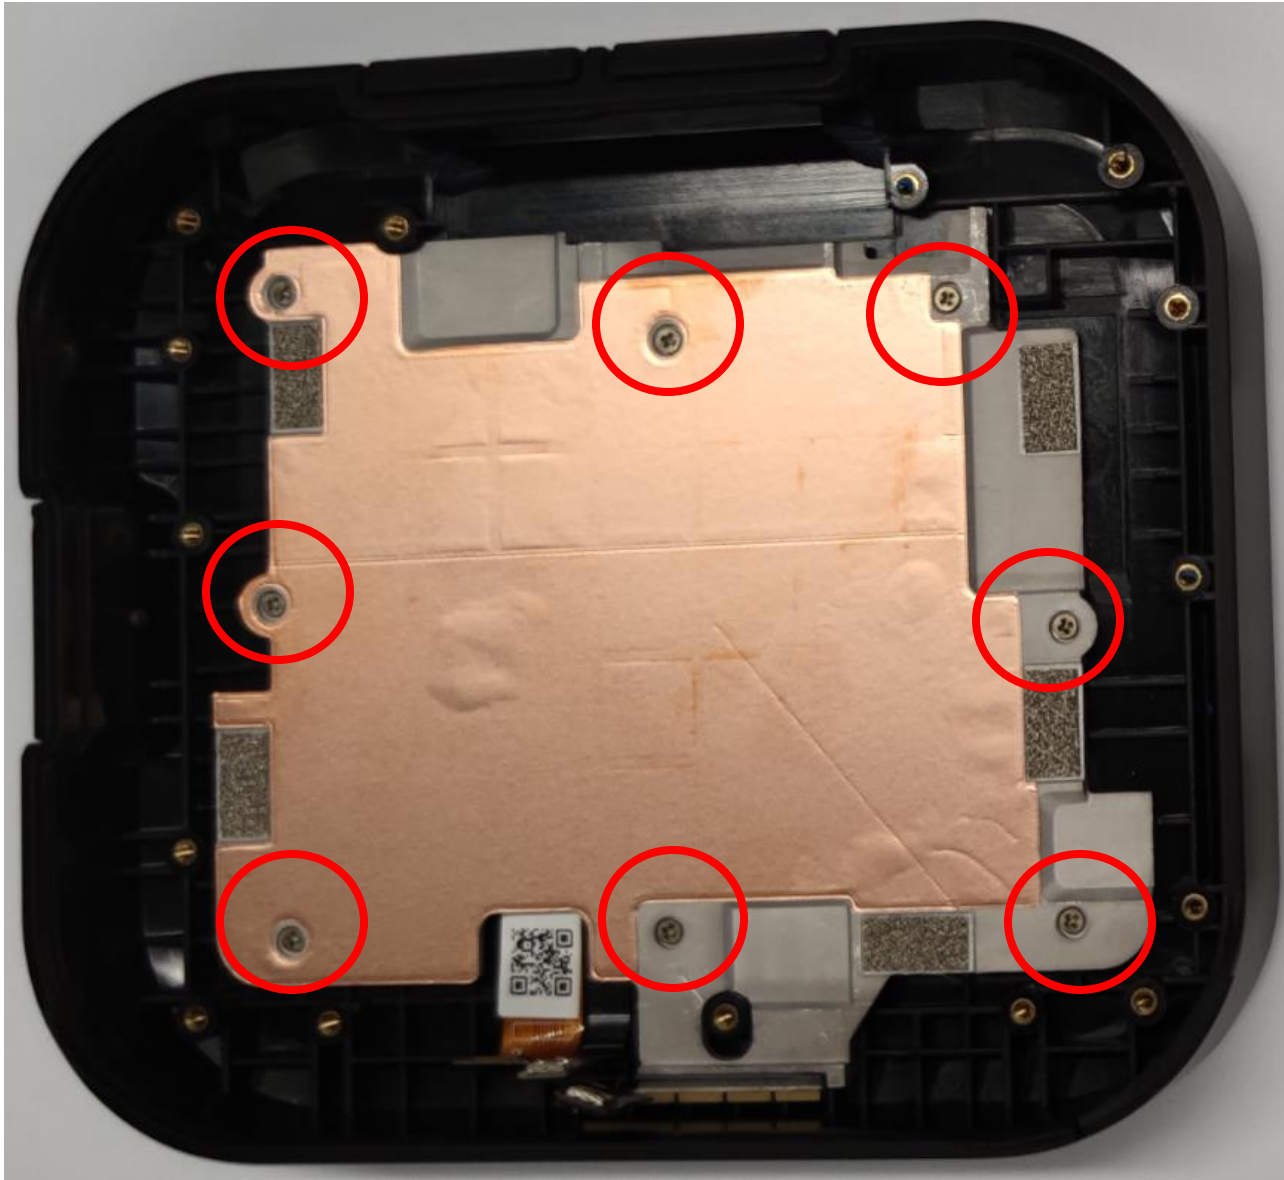

9. Remove the bracket of front housing and 2 MMW FPCS

