

Sonim® Spot™ H100

4G Mobile Hotspot
Quick Start Guide



sonim.

/01

Getting started with your new Sonim® Spot™ H100 4G Mobile Hotspot

Contents:

Sonim H100


Battery

USB Type-C cable

Quick Start Guide

1. Indicator Light
2. Navigation Button
3. Display
4. USB Type-C Port
5. Power Button
6. SIM Tray (under battery)
7. Battery (under battery cover)




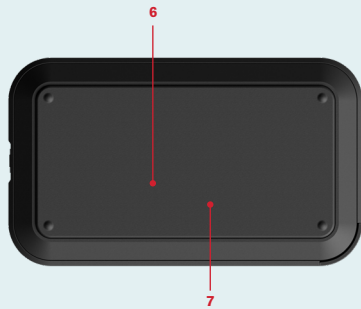

How to insert a SIM


Step 1

Remove the battery cover using the thumb catch at the bottom of the H100.

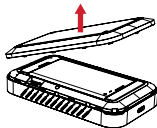


Step 2

Remove the battery.

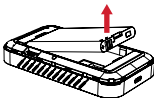

Step 3

Gently place your LTE SIM card in the slot with the gold contacts facing down. Replace the battery and close the battery cover.

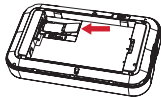


Note: A SIM PIN protects your SIM from unauthorised use. If you need to enter a SIM PIN upon insertion of the SIM, please go to the web user interface and settings>SIM PIN management and enter the SIM PIN supplied by your service provider.

How to insert the battery

Prior to first use, open the battery cover and remove the plastic tab on the battery.


Step 1

Insert the battery flush into the cavity such that the metallic contacts on the battery are aligned with the metallic contacts within the battery compartment.

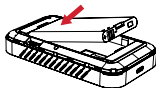

Step 2

Close the battery cover.

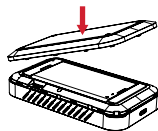

Note: The battery in your H100 is not fully charged. Before use, we recommend charging the device for three hours.

Set up your H100

1. Press and hold the Power button for three seconds.
2. Open the Wi-Fi application or controls on your laptop or Wi-Fi-enabled device that you want to connect to your H100.
3. Find your H100 Wi-Fi name (SSID). Your SSID is either SSID H100_2.4GHz (default) or H100_5GHz (selectable). Click Connect and enter the password.

Note: The password can be found in the Wi-Fi information screen, displayed next to the Lock icon.

Device management

1. On your Wi-Fi device or laptop that is connected to your H100, type **http://192.168.1.1** or **http://sonim.mobilehotspot/** in the address bar.
2. Enter the **Username** and **Password**.
3. Click **Login**. You can modify the user credentials if you require.

Note: The default username is “admin”. The password can be found in the Help section of your device.

Information on how to change your Username and Password can be found in the user guide at www.sonimtech.com/wireless-connectivity/help/h100.

Warranty

Sonim Technologies provides a 2-Year warranty on your H100. Please register within 30 days of purchase at www.sonimtech.com/register to receive product information and updates. For more information related to the warranty, please contact your service provider.

Support

Web: www.sonimtech.com/wireless-connectivity/help/h100

Technical Support: support@sonimtech.com

Request for warranty or RMA support:
RMA@sonimtech.com

Phone: For local contact numbers and hours of operation, please visit our website at www.sonimtech.com/support/contact-support/

Download a User Guide:
www.sonimtech.com/wireless-connectivity/help/h100

This Quick Start Guide is available in additional languages. To see available languages and download, please scan the QR code.

